



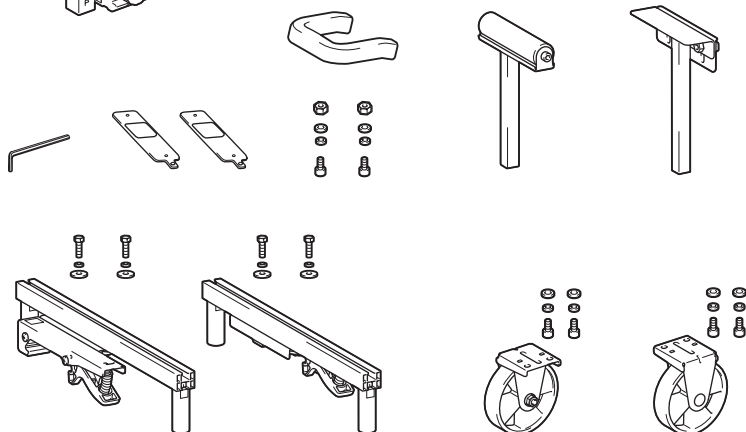
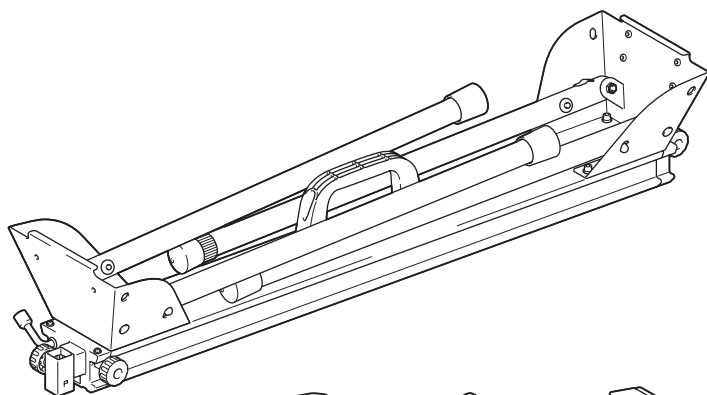
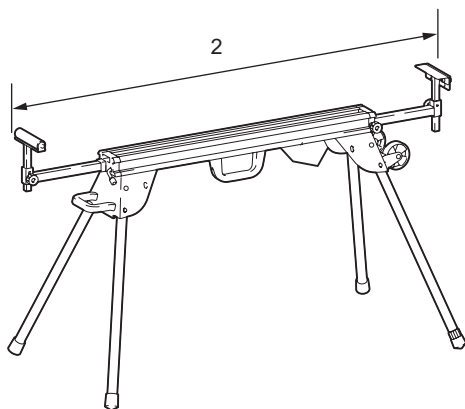






	1	2
WST06	1,150 mm	2,550 mm
WST07	1,765 mm	3,830 mm

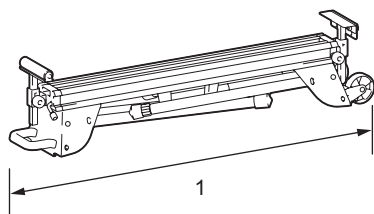

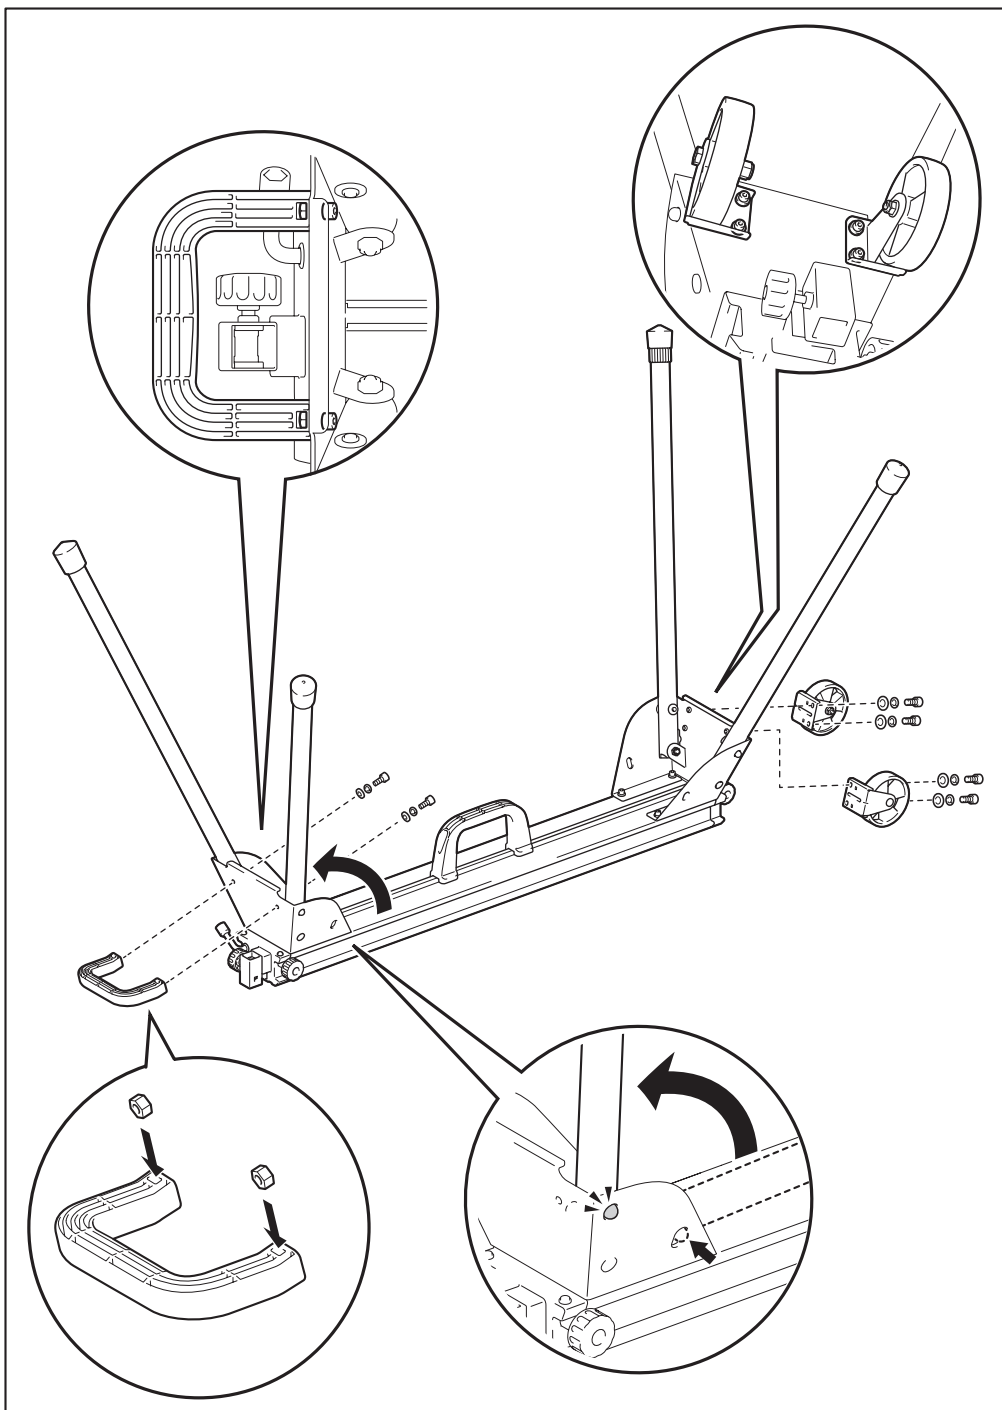

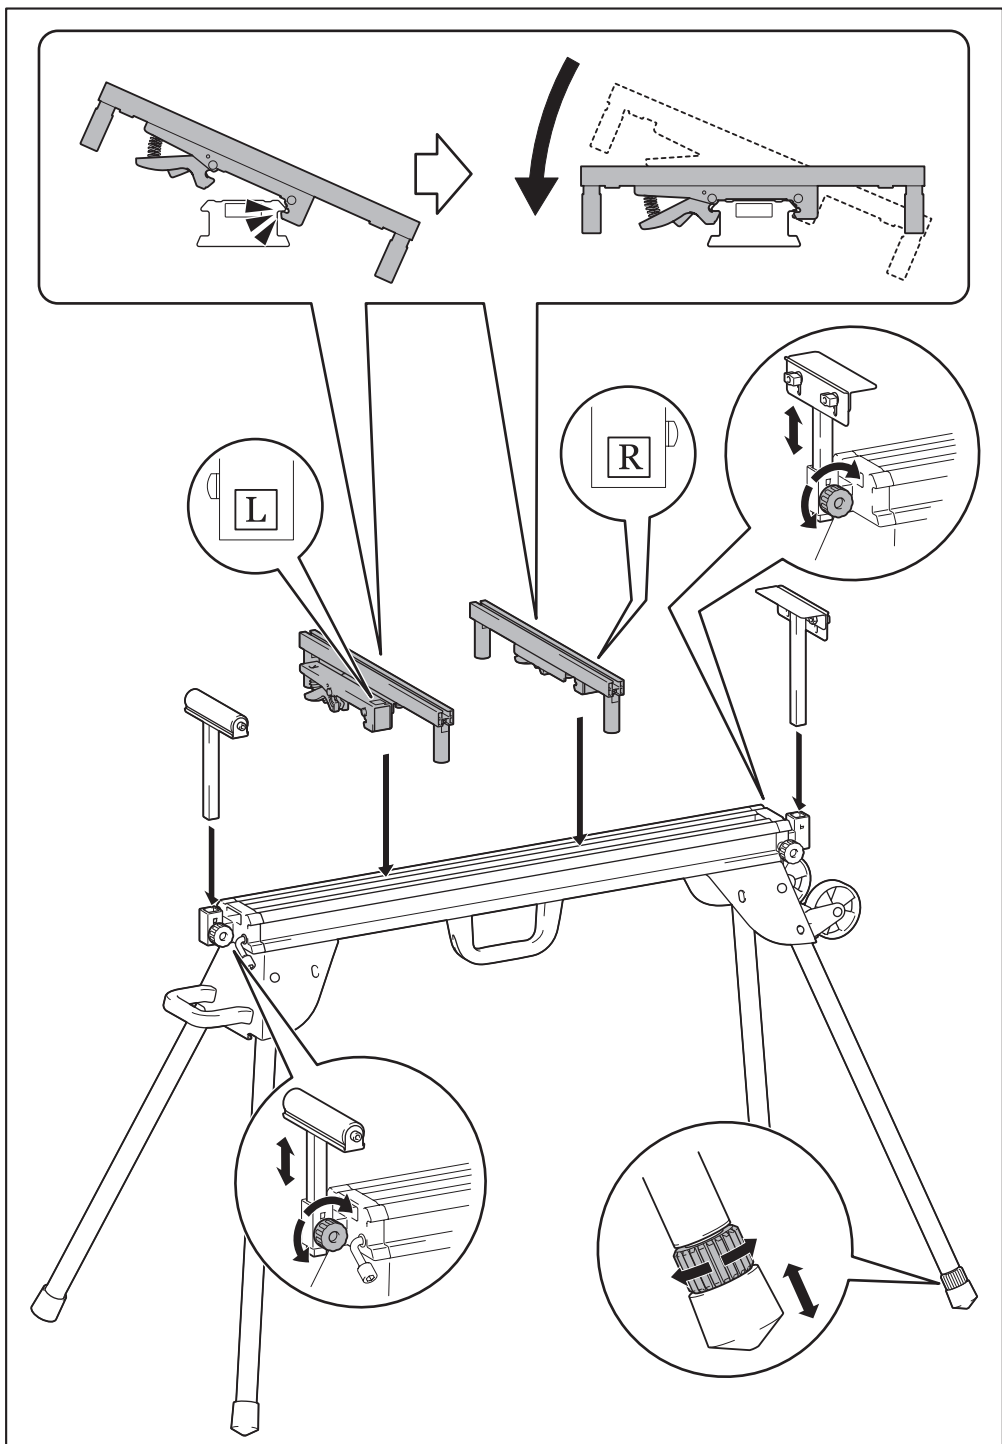

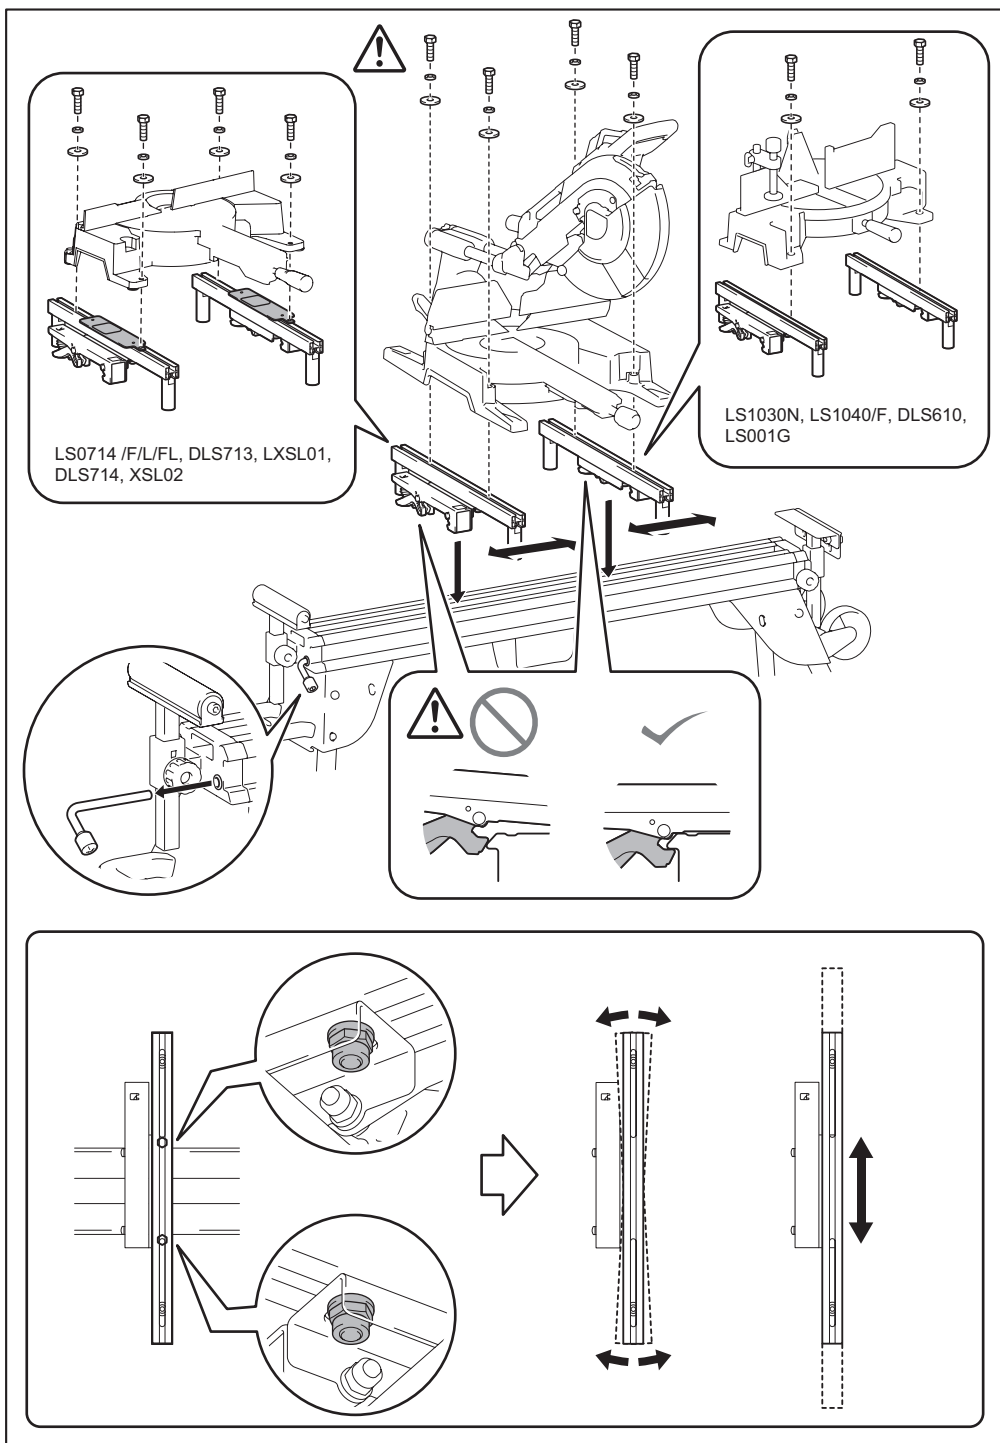

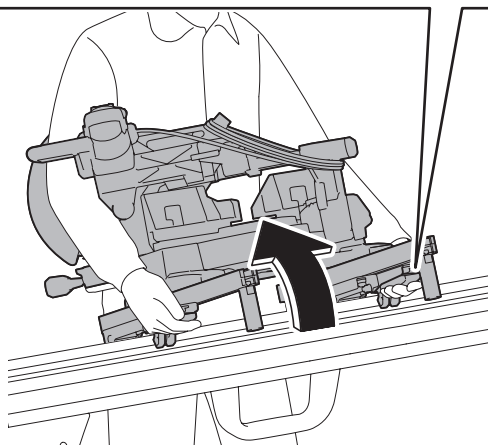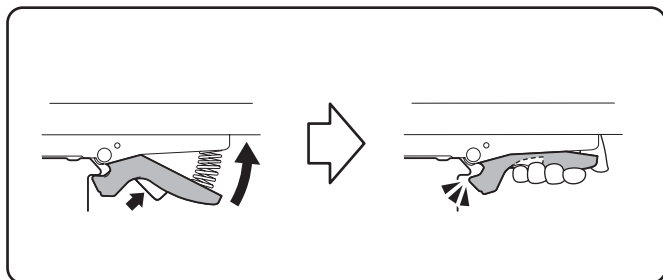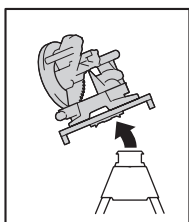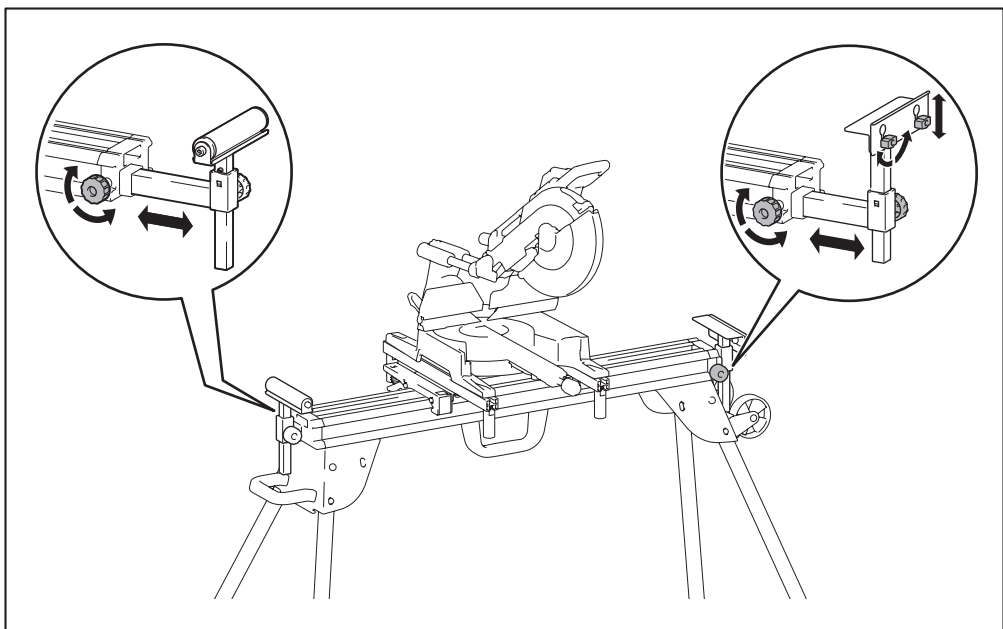

ENGLISH

Applicable models

This stand is applicable to Makita miter saws **EXCEPT FOR** the following models:
DLS600, LH1040/F, LH1201FL

Symbols



Take particular care and attention.



Read instruction manual.



Maximum allowable loading

Safety instructions

CAUTION:

- Read and thoroughly understand this manual and the instruction manual of your miter saw before use.
- Before installing a miter saw on this stand, always switch off and unplug or remove the battery cartridge(s).
- Use this stand only with the applicable Makita miter saws.
- Always use the stand with its legs extended and locked.
- Before operating the miter saw, be sure to secure the miter saw to the stand using bolts.
- Before operating the miter saw, make sure that the miter saw is secured to the stand by the lock.
- Do not use the stand on uneven or unstable surface.
- Do not climb, sit or stand on the stand.
- When storing miter saw stand, never lean it against the wall or the like lengthwise or sideways.
- Remove the miter saw when transporting the stand.
- Be careful not to pinch your finger when grabbing the lever to detach the miter saw from the stand.

SUOMI

Yhteensopivat mallit

Tämä teline on yhteensopiva kaikkien Makita-jiirisahojen kanssa **seuraavia malleja LUKUUN OTTAMATTA**:
DLS600 LH1040/F LH1201FL

Symbolit



Noudata erityistä varovaisuutta ja kiinnitä huomiota.



Lue käyttöohje.



Suurin sallittu kuormitus

Turvaohjeet

VAROITUS:

- Lue tämä käyttöopas ja jiirisahan käyttöohjeet huolellisesti ennen käyttöä ja varmista, että olet sisäistänyt niiden ohjeet.
- Ennen kuin asennat jiirisahan tähän telineeseen, sammuta aina sahasta virta ja irrota sen virtajohto tai akkupaketit.
- Käytä tätä telinettä vain yhteensopivien Makita-jiirisahojen kanssa.
- Käytä telinettä aina sen jalat pidennettyinä ja lukittuina.
- Ennen kuin käytät jiirisahaa, kiinnitä jiirisaha telineeseen pulteilla.
- Ennen kuin käytät jiirisahaa, varmista, että jiirisaha on kiinni telineessä lukolla.
- Älä käytä telinettä epätasaisella tai epävakaalla alustalla.
- Älä kiipeä telineen päälle äläkä istu tai seiso sen päällä.
- Kun varastoit jiirisahatelineen, älä koskaan aseta sitä pitkittäin tai poikittain nojalle seinää tai vastavaa tukea vasten.
- Irrota jiirisaha telinettä siirrettäessä.
- Varo, etteivät sormesi jää puristukseen, kun käytät jiirisahan telineestä irrottavaa vipua.